


Ignition Switch S.65570 Gas or all Diesel Less Cold Start

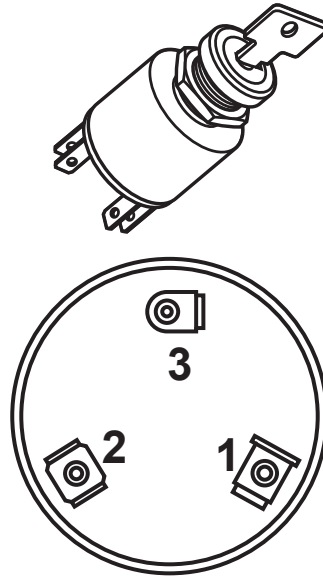

1. Battery feed and light switch connection
2. Gauge, warning lamp and ignition
3. Safety start switch and starter solenoid